

Software

Things to know about the software used to run the laser

- [!\[\]\(c8dce68b26731c7aa5915072fc9d68dd_img.jpg\) RDWorks](#)
- [!\[\]\(76b3245de86167eba9fcdc9cc9f32aa4_img.jpg\) Importing files](#)

RDWorks

The laser uses RDWorks v8 software.

As users are charged by contact time, it is suggested that you download the software to your own computer and become familiar with it prior to starting to use the laser. You should prepare your design in advance of your laser time slot, so that you are ready to cut straight away.

Download link for the software, drivers and manual:

<https://www.rdacs.com/en/download?type=software>

Configuration files for the machine and material parameters can be obtained from the laser PC at the Hackspace.

□□ Importing files